



Bolt-Down Assembly & Installation Instructions (Farrington Series)

The JES Bolt-Down option assembly consists of a **pipe nipple** (1), **flat washer** (1), **external tooth washer** (1), and **nuts** (2).
The hardware is supplied assembled to lamp base.



STEP 1

If mounting to bedside cabinet: **Remove drawer** and set aside



STEP 2

Drill ½" hole in table top in the location specified by owner



STEP 3


- **Remove nut** (1), **flat washer** (1), and **external tooth washer** (1) from the pipe nipple
- **Place lamp base and bolt-down pipe nipple** over hole and set in place



Bolt-Down Assembly & Installation Instructions (Farrington Series)

STEP 4

Attach flat washer (1), external tooth washer (1), and nut (1)
to pipe nipple at underside of table top.
Lamp base should sit squarely on table top

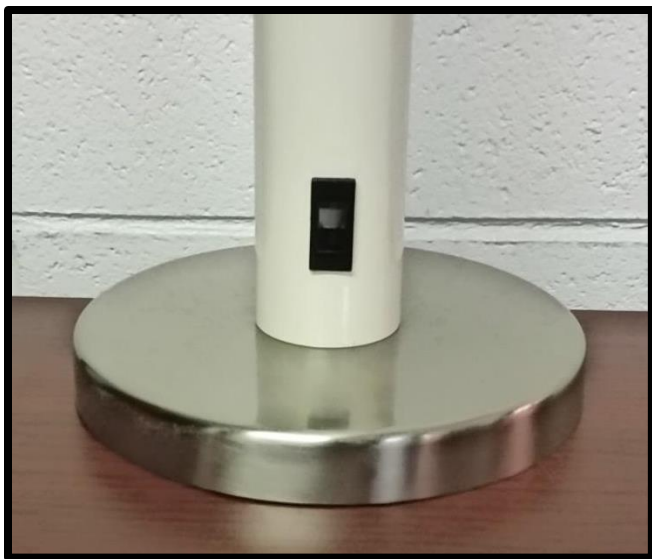

STEP 5

Tighten with 11/16" wrench.



STEP 7

If necessary, replace drawer



Done

JES Bolt-Down assembly and installation complete

