

Bolt-Down Kit

Retrofitting standard lamp base to Bolt-Down



The JES **Bolt-Down Kit** option assembly consists of a **pipe nipple** (1), **flat washers** (2), **external tooth washers** (2), and **nuts** (2).



STEP 1

Using exacto-knife: cut felt using the bottom rim of the base as a guide



STEP 2

Peel away the center felt leaving a ring of felt on the bottom rim of the base



STEP 3

- Use 11/16" socket wrench to remove **base weight**, **base cover** and **all hardware** from bottom of lamp column
- Save the base cover for later re-assembly



Bolt-Down Kit

Retrofitting standard lamp base to Bolt-Down

STEP 4

- Set **1 nut**, **1 external tooth washer** and **1 flat washer** on threaded rod $\frac{1}{4}$ " from the end



STEP 5

- Replace base cover and insert nipple + hardware
 - Secure with open $11/16$ " wrench



STEP 6

- If mounting to bedside cabinet: **Remove drawer** and set aside
- **Drill $\frac{1}{2}$ " hole** in table top in the location specified by owner



STEP 7

- **Place lamp base and bolt-down pipe nipple over hole** and set in place




Bolt-Down Kit

Retrofitting standard lamp base to Bolt-Down


STEP 8

Attach flat washer (1), external tooth washer (1), and nut (1) to pipe nipple at underside of table top.
Lamp base should sit squarely on table top

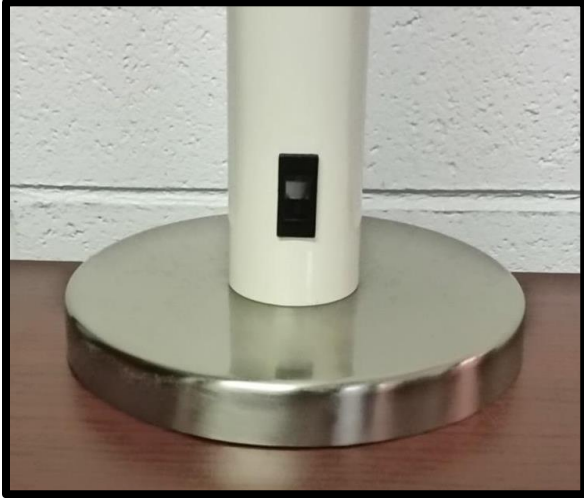

STEP 9

Tighten with 11/16" wrench.

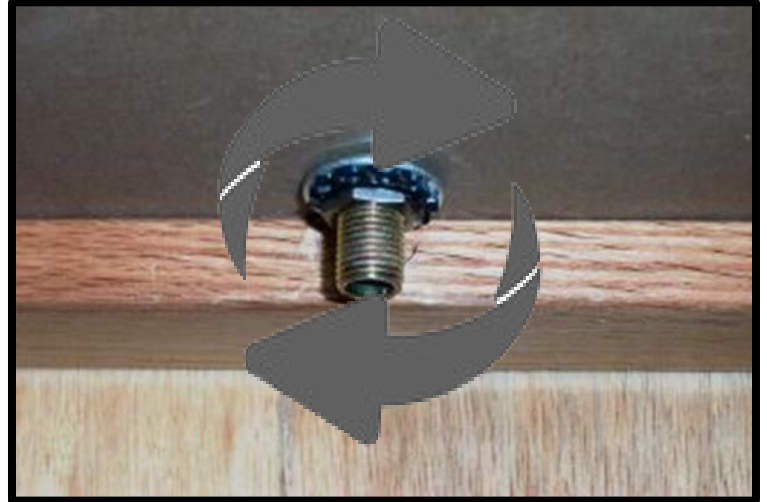

STEP 10

If necessary, replace drawer



Done

JES Bolt-Down assembly and installation complete

